

## Touch Wheel RF Remote Controller

Model No.: RT1/RT6/RT8

1, 4, 8 zone dimming/Touch color wheel/Wireless remote 30m distance/AAAx2 battery/Magnet stuck fix



RT1  
1 Zone Dimming



RT6  
4 Zone Dimming



RT8  
8 Zone Dimming

CE RoHS LVD RED

### Features


- Apply to single color LED controller.
- Ultra sensitive color adjustment touch wheel.
- Each remote can match one or more receiver.
- AAAx2 battery powered.
- Operate with LED indicator light.
- Magnet on the back which can be stuck on back holder.

### Technical Parameters

Input and Output	
Output signal	RF(2.4GHz)
Working voltage	3VDC(AAAx2)
Working current	< 5mA
Standby current	< 10µA
Standby time	1 year
Remote distance	30m(Barrier-free space)
Environment	
Operation temperature	Ta: -30°C ~ +55°C
IP rating	IP20

Safety and EMC	
EMC standard (EMC)	ETSI EN 301 489-1 V2.2.3 ETSI EN 301 489-17 V3.2.4
Safety standard(LVD)	EN 62368-1:2020+A11 1:2020
Radio Equipment(RE)	ETSI EN 300 328 V2.2.2
Certification	CE, EMC, LVD, RED
Warranty	
Warranty	5 years
Weight	
Net weight	48g
Gross weight	88g

### Mechanical Structures and Installations

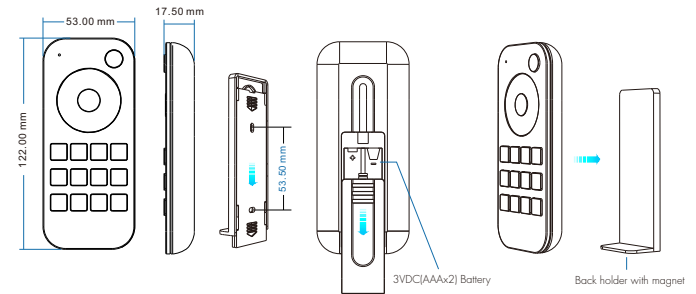

To fix the remote, three options are offered for selection:

- Option 1: stuck the remote on any metal surfaces directly.
- Option 2: fix the remote' back holder on the wall with two screws.
- Option 3: adhere the remote' back holder to the wall with pastar.

### Operation

- When turn on light, the indicator display blue. when turn off light, the indicator display red.
- When touch the color wheel, the indicator will display the same color.
- When press or touch operation is invalid (If the light is off), the indicator display red.
- To extend battery life, no touch or press key operation after a few seconds, the touch wheel will enter sleep state, you need press any key to make touch wheel quit sleep state.

### Match Remote Control (two match ways)

End user can choose the suitable match/delete ways. Two options are offered for selection:

#### Use the controller's Match key

Match:

Short press match key, immediately press on/off key (single zone remote) or zone key (multiple zone remote) of the remote.

The LED indicator fast flash a few times means match is successful.

Delete:

Press and hold match key for 5s to delete all match, The LED indicator fast flash a few times means all matched remotes were deleted.

#### Use Power Restart

Match:

Switch off the power, then switch on power, repeat again. Immediately short press on/off key (single zone remote) or zone key (multiple zone remote) 3 times on the remote. The light blinks 3 times means match is successful.

Delete:

Switch off the power, then switch on power, repeat again. Immediately short press on/off key (single zone remote) or zone key (multiple zone remote) 5 times on the remote. The light blinks 5 times means all matched remotes were deleted.

## Key function






### • RT1 1 zone dimming remote



-  : Turn on/off light.
-  : Touch to change brightness.
-  : Adjust brightness, short press 10 levels, long press 1-6s for continuous 256 levels adjustment.
-  : Small night brightness (10%).
-  : Turn off light after 30s, long press 2s will turn off light after 60s.
-  : 25%, 50%, 75%, 100% brightness.
-  : Short press recall the scene, long press 2s save current brightness into S1/2/3/4, the LED indicator display green when save OK.

### • RT6 4 zone dimming remote



-  : Short press turn on/off all zone light.
-  : Touch to change current zone brightness.
-  : Short press select and turn on zone light, long press 2s turn off zone light, Short press multiple zone key fastly, will select multiple zone synchronously.
-  : 25%, 50%, 75%, 100% brightness for current selected zone.
-  : Short press recall the scene, long press 2s save current state into S1/2/3/4, the LED indicator display green when save OK, 4 zone recall or save synchronously.

The remote can be used as 4 zone dimming remote or single zone 4 channel dimming remote.





**On/Off + 4**: Long press 2s set as 4 channel dimming remote, only match with one or multiple receiver of 4 channel, such as V4 or C4 controller.

**On/Off + 1**: Long press 2s set as 4 zone dimming remote, each zone match with one or multiple receivers.

When set ok, the red indicator will light on longer.

### • RT8 8 zone dimming remote



-  : Short press turn on/off all zone light.
-  : Touch to change current zone brightness.
-  : Short press select and turn on zone light, long press 2s turn off zone light, Short press multiple zone key fastly, will select multiple zone synchronously.
-  : Short press recall the scene, long press 2s save current state into S1/2/3/4, the LED indicator display green when save OK, 8 zone recall or save synchronously.

## Safety information

1. Read all instructions carefully before you begin this installation.
2. When installing battery, pay attention to the battery positive and negative polarity.  
A long time without the remote control, remove the battery.  
When remote distance becomes smaller and insensitive, replace the battery.
3. If no response from the receiver, please re-match the remote.
4. Gently handle remote, beware of falling.
5. For indoor and dry location use only.